Installation of ODP200 & TRP100 printers under Windows XP



•	Installation of USB p	age 2
•	Installation of serial p	age 5
•	Installation of parallel p	age 8
•	Dip switch configuration Pa	ge 10



1.Installation of USB :

- Run the driver installation VENDOR THERMAL DRIVER 3.2.0.EXE
- Choose LPT1 as the connection

Model Name :	VENDOR THERMAL PRINTER
Installer Version : Driv Select Port Information	3.00 n Dialog
Proc	COM2 COM2 COM4 C LPT1 C LPT2 C LPT3 Exit
Installation(l)	Exit(E)

- Following the completion of the driver installation, go to 'printers & faxes' to check that the printer has installed correctly.





- Right click on the printer icon & select 'properties' from the drop down list



- Click on the 'ports' tab & check the Virtual Printer Port to connect to the printer via USB





- Verify the installation by clicking ion the 'general' tab & then click the 'print test page' button

Device Setti	ngs Pi	rinter Commands	Logo Selection	ControlA	Version
General	Sharing	Ports	Advanced	Color Management	Security
<i>.</i>	ENDOR THERM	IAL PRINTER]	
ocation:					
Comment:					
Model: V	ENDOR THERM	AL PRINTER			
Features Color: No		Paper available:			
Double-sided Staple: No	: No	80 x 297 mm	*		
Speed: Unkn Maximum res	own ollution: 180 dpi		~		
	Printing	g Preferences.	Print Test Page		



2. Installation of serial :

- Run the driver installation VENDOR THERMAL DRIVER 3.2.0.EXE
- Choose the com port that the printer is connected to

Model Information Model Name :	VENDO	R THERMAL PRINTER
Select Port Inform:	3.00	X
Serial Port	© COM2 C COM4	Parallel Port
Proç		Exit
Installation(I)		Exit(E)

- Following the completion of the driver installation, go to 'printers & faxes' to check that the printer has installed correctly





- Right click on the printer icon & select 'properties' from the drop down list



- Click on the 'ports' tab & then click on the 'configure port' button to view the com port settings

Device Set	tings	Printer Commands	Logo Selec	tion	ControlA	Version
General	Sharing	Ports	Advanced	Color	Management	Security
VEP	NDOR THERN	IAL PRINTER	he first free			
Port	Description	Printer		*		
COM6:	Serial Port			=		
COM7:	Serial Port					
COM3:	Serial Port	Generic / Te	xt Only			
	Senal Port					
	Serial Port					
- COM9-	Serial Port			-		



- Carry out a self test on the printer (see page 10) & verify that the com port parameters match the settings for the printer

COM1 Properties	<u> १ ×</u>
Port Settings	
II	
Bits per second:	9600 💌
Data bits:	8 -
Parity:	None
Stop bits:	1
Flow control:	None 🔻
	Restore Defaults
	K Canad Apply

- Verify the installation by clicking ion the 'general' tab & then click the 'print test page' button

Device S	Settings	Printer Commands	Logo Select	ion	ControlA	Version
General	Sharing	Ports	Advanced	Colo	r Management	Security
S	VENDOR TH	ERMAL PRINTER				
Location:						
Comment:						
Model: Features	VENDOR THE	RMAL PRINTER				
Color: No		Paper available:				
Staple: No	ded: No p	80 x 297 mm	^			
Maximum	resolution: 180 d	pi	-			
	Pri	nting Preferences.	Print Test Page			
			-			



3. Installation of parallel :

- Run the driver installation VENDOR THERMAL DRIVER 3.2.0.EXE
- Choose the parallel port that the printer is connected to (usually LPT1)

🐞 VENDOR THERMAL POS F	rinter Installati	ion Program	×
Model Information Model Name :	VEND	OR THERMAL PRINTER	
Installer Version :	n: 3.00		
Driv Select Port Info	rmation Dialog	×	
Serial Por C COM1 C COM3	C COM2	Parallel Port C LPT1 C LPT2 C LPT3	
		Exit	
Instellation()		Exit(E)	

- Following the completion of the driver installation, go to 'printers & faxes' to check that the printer has installed correctly





- Verify the installation by clicking ion the 'general' tab & then click the 'print test page' button

Device Setting	s Pi	inter Commands	Logo Selecti	on	ControlA	Version
General	Sharing NDOR THERM	Ports	Advanced	Color M	anagement	Security
Location:						
Model: VEN Features	IDOR THERM	AL PRINTER				
Color: No Double-sided: N Staple: No Speed: Unknow Maximum resolu	o m tion: 180 dpi	Paper available: 80 x 297 mm	*			
	Printin	g Preferences.	Print Test Page	\supset		



4. Dip switch configuration :

- Serial interface

DIP Switch Set 1 Functions

SW	FUNCTION	ON	OFF	DEFAULT
1	Data Receive	Ignored	Print "?"	OFF
2	Hexadecimal	HEXDUMP	NORMAL	OFF
3	Hand Shaking	XON/XOFF	DTR/DSR	OFF
4	Data Length	7bits	8bits	OFF
5	Parity Check	ENABLED	DISABLED	OFF
6	Parity Check	EVEN	ODD	OFF

Baud rate selection

Transmission speed	SW-7	SW-8
4800 bps	ON	ON
9600 bps	OFF	ON
19200 bps	ON	OFF
38400 bps	OFF	OFF

Print Density (DIP-SW2)

Print Density	SW-1	SW-2
Low Power	ON	ON
Normal	OFF	ON
Normal	ON	OFF
Dark	OFF	OFF

The default configuration is 9600 baud, no parity, 8 data bits, 1 stop bit. A self test can be printed from the printer by holding down the feed button & switching the printer on.

This self test displays the current configuration of the printer (see below)

******	******	****	
Printer is as follows	:		
Firmware Version		Ver 1.00	
**********************	******	******	
Characters	:	42 Char/Line	
Codepage 437(ENGLISH)	;	Install	
朱本峰本寺古山市市林市大市大市大市大市市 (1)	*****	********	
Emulation	:	Epson	
Print Density	:	Normal	
Cutter mode	:	Partial cut	
Paper-Low Detect	:	ON	
Interface	:	RS-2326(SID)	
Baudrate	:	9600	
Data Bits	:	8 Bits	
(Stop Bits	:	1 Bits)
Parity	:	None	
Handshak ing	:	DTR/DSR	

